




Before You Begin

Read These Instructions Completely and Carefully



Upgrade Instructions

- STEP 1:** Disconnect power from the luminaire and follow proper lockout/tagout procedures before beginning installation or maintenance.
- STEP 2:** Remove the luminaire cover or diffuser and the existing fluorescent lamps. Dispose of the fluorescent lamps per local requirements.
- STEP 3:** Open the wiring compartment to expose the fluorescent ballast.
- STEP 4:** Confirm the existing fluorescent ballast is an electronic instant start ballast.* Close the wiring compartment.
- STEP 5:** Install the *Venture Lighting's* T8 Instant Start Compatible lamp.

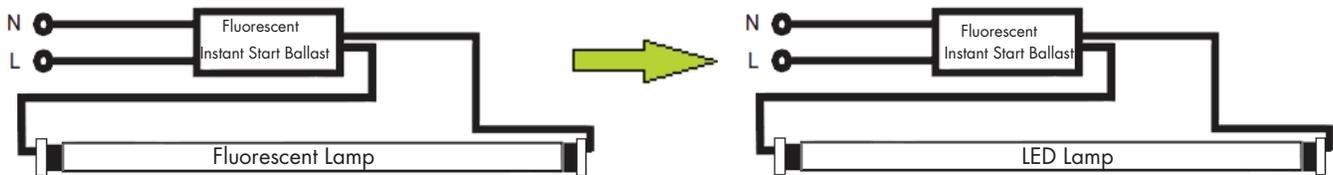

STEP 6: Replace the luminaire cover or diffuser.

STEP 7: Switch on the power.

*The Venture T8 lamp is designed to operate on most electronic instant start fluorescent ballasts. A list of compatible instant start ballasts can be found at VentureLighting.com.

WARNING

Risk of fire and electric shock

- Disconnect power from the luminaire and follow proper lockout/tagout procedures before beginning installation or maintenance. Contact a qualified electrician for installation.
- *Venture Lighting* T8 LED lamp installation requires knowledge of luminaire electrical systems. If not qualified, do not attempt installation. Contact a qualified electrician.
- To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.
- Do not make or alter any open holes in a wiring enclosure or electrical components during installation.
- This device is not intended for use with emergency exits.
- If the lamp or luminaire exhibits undesirable operation (buzzing, flickering, etc.) immediately turn off the power to the luminaire, remove the lamp from the luminaire, and contact the manufacturer.

CAUTION

- Do not use with dimmers.
- Suitable for use in dry or damp locations only.
- *Venture Lighting* T8 LED lamps must be operated within an ambient fixture temperature range of -20° to 45°C.
- This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



(877) 281-1233

Fax: (877) 294-2829
7905 Cochran Road
Glenwillow, Ohio 44139 USA
E-mail: venture@adlt.com

VentureLighting.com





Avant que tu commences

Lisez ces instructions complètement et attentivement



VENTURE
LIGHTING

Instructions de mise


ÉTAPE 1: Coupez l'alimentation du luminaire et suivez les procédures de verrouillage / débranchement avant de commencer l'installation ou l'entretien.

ÉTAPE 2: Retirez le couvercle ou luminaire et diffuseur les lampes fluorescentes existantes. Éliminer les lampes fluorescentes par des exigences locales.

ÉTAPE 3: Ouvrez le compartiment de câblage pour exposer le ballast fluorescent.

ÉTAPE 4: Confirmer le ballast fluorescent existant est un instant électronique démarre ballast.* Fermez le compartiment de câblage.

ÉTAPE 5: Installez T8 démarrage instantané Lampe compatible de l'éclairage Venture.

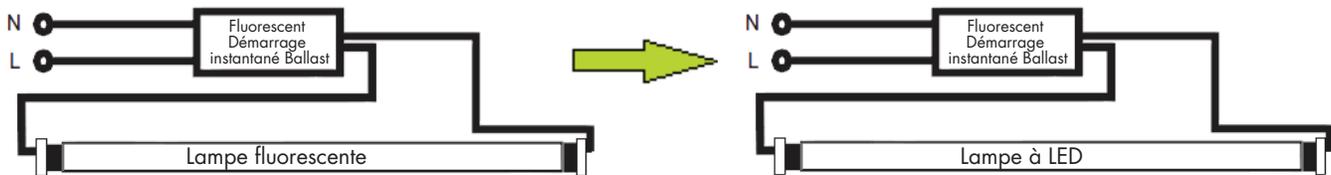

ÉTAPE 6: Replacer le couvercle du luminaire ou un diffuseur.

ÉTAPE 7: Allumez le pouvoir.

*La lampe Venture T8 est conçu pour fonctionner sur la plupart des ballasts début fluorescentes instantanés électroniques. Une liste des ballasts à allumage instantané compatibles peut être trouvé à VentureLighting.com.

ATTENTION

Risque d'incendie et de choc électrique

- Coupez l'alimentation du luminaire et suivez les procédures de verrouillage / débranchement avant de commencer l'installation ou l'entretien. Contactez un électricien qualifié pour l'installation.
- L'installation de la lampe *Venture Lighting* T8 LED exige une connaissance des systèmes électriques de luminaires. Si vous n'êtes pas qualifié, ne tentez pas de l'installation. Contactez un électricien qualifié.
- Pour éviter d'endommager le câblage ou à l'abrasion, ne pas exposer le câblage aux bords de tôle ou d'autres objets pointus.
- Ne pas faire ou modifier les trous ouverts dans une enceinte de câblage ou les composants électriques lors de l'installation.
- Ce dispositif est pas destiné pour une utilisation avec les sorties de secours.
- Si la lampe ou un luminaire présente opération undersirable (bourdonnement, scintillement, etc.) éteignez immédiatement le pouvoir au luminaire, retirer la lampe du luminaire, et contactez le fabricant.

MISE EN GARDE

- Ne pas utiliser avec des variateurs.
- Convient pour une utilisation dans des endroits secs ou humides seulement.
- *Venture Lighting* T8 LED lampes doivent être utilisés dans une plage de température ambiante de fixation de -20 ° à 45 ° C.
- Cet appareil est conforme à la partie 15 des règles de la FCC. Son fonctionnement est soumis aux deux conditions suivantes: (1) Ce dispositif ne peut causer des interférences nuisibles, et (2) cet appareil doit accepter toute interférence reçue, y compris les interférences qui peuvent provoquer un fonctionnement indésirable.



(877) 281-1233

Fax: (877) 294-2829
7905 Cochran Road
Glenwillow, Ohio 44139 USA
E-mail: venture@adlt.com

VentureLighting.com

