



Before You Begin

Read These Instructions Completely and Carefully



WARNING

Risk of electric shock

- Disconnect power from the luminaire and follow proper lockout/tagout procedures before beginning installation or maintenance. Contact a qualified electrician for installation.
- *Venture Lighting's* LED Temporary Light Fixture requires 120V 60Hz input voltage. The installer is responsible to determine whether the proper voltage is run to the luminaire being installed/serviced.
- Ensure the electrical receptacle is properly grounded.
- *Venture Lighting's* LED Temporary Light Fixture is IP64 rated.
- This device is not intended for use with emergency exits.
- This device is not intended for use with dimmers.
- MIN 75°C supply conductor must be used.
- This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Installation Instructions

STEP 1: Disconnect power from the luminaire and follow proper lockout/tagout procedures before beginning installation or maintenance.

STEP 2: Screw the hook onto the top of the fixture. (Figure 1)

STEP 3: Hang the fixture to a ceiling hook or similar. (Figure 2)

STEP 4: Connect the plug into a 120V 60Hz receptacle.

STEP 5: Add additional fixtures by plugging into previous fixture's receptacle.

STEP 6: Power can be restored to the system.

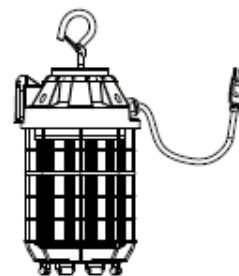


Figure 1

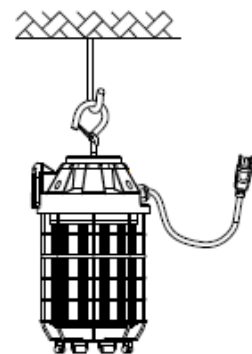


Figure 2

(877) 281-1233

Fax: (877) 294-2829

7905 Cochran Rd, Suite 300
Glenwillow, Ohio 44139 USA

E-mail: venture@adlt.com

VentureLighting.com





Avant de commencer

Lisez ces instructions complètement et attentivement



ATTENTION

Risque de choc électrique

- Déconnectez l'alimentation du luminaire et suivez les procédures de verrouillage/tagout appropriées avant de commencer l'installation ou l'entretien. Contacter un électricien qualifié pour l'installation.
- Le luminaire temporaire à DEL de *Venture Lighting* nécessite une tension d'entrée de 120V à 60Hz. L'installateur est responsable de déterminer si la tension appropriée est appliquée au luminaire en cours d'installation / d'entretien.
- Assurez-vous que la prise électrique est correctement mise à la terre.
- Le luminaire temporaire à DEL *Venture Lighting* est classé IP64.
- Cet appareil n'est pas destiné à être utilisé avec des issues de secours.
- Cet appareil n'est pas destiné à être utilisé avec des gradateurs.
- Un conducteur d'alimentation MIN 75°C doit être utilisé.
- Ce produit doit être installé conformément au code d'installation applicable par une personne familiarisée avec la construction et le fonctionnement du produit et les risques encourus.

Instructions de Mise

- 1: Débranchez l'alimentation du luminaire et suivez les procédures de verrouillage / étiquetage appropriées avant de commencer l'installation ou l'entretien.
- 2: Vissez le crochet sur le dessus du luminaire. (Figure 1)
- 3: Accrochez le luminaire à un crochet de plafond ou similaire. (Figure 2)
- 4: Branchez la fiche dans une prise 120V 60Hz.
- 5: Ajoutez des appareils supplémentaires en les branchant dans la prise de l'appareil précédent.
- 6: Le système peut être rétabli.

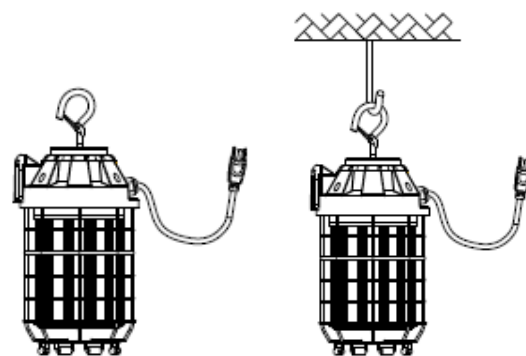


Figure 1

Figure 2

(877) 281-1233

Fax: (877) 294-2829

7905 Cochran Rd, Suite 300
Glenwillow, Ohio 44139 USA

E-mail: venture@adlt.com

VentureLighting.com

