




Before You Begin

Read These Instructions Completely and Carefully



Motion Sensor Installation Instructions

(VSolution Fixture with or without Reflector)

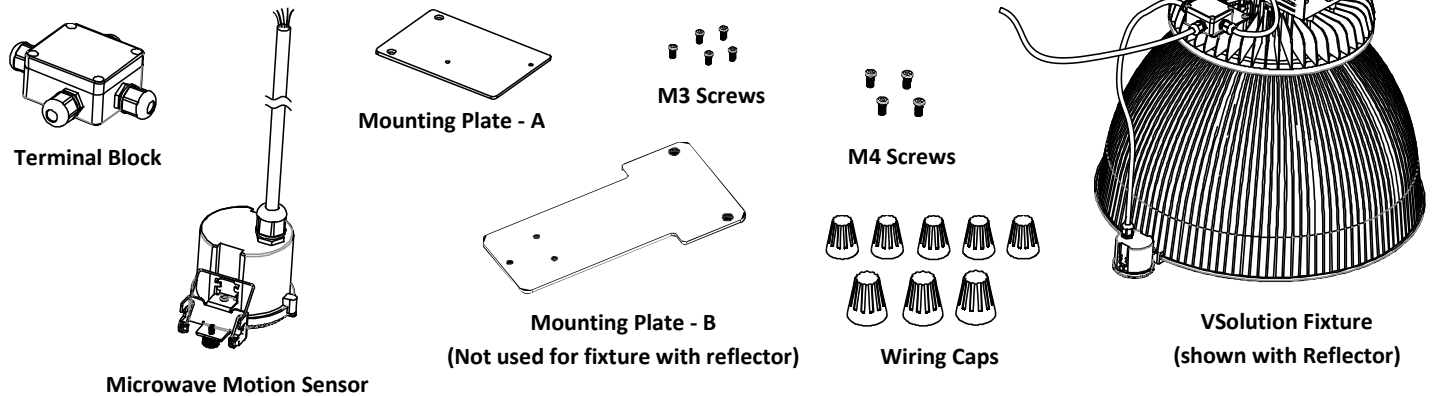

STEP 1: Remove terminal block cover and attach block base to mounting plate A with two M3 screws.

STEP 2: Attach mounting plate/terminal block assembly to fixture with two M4 screws.

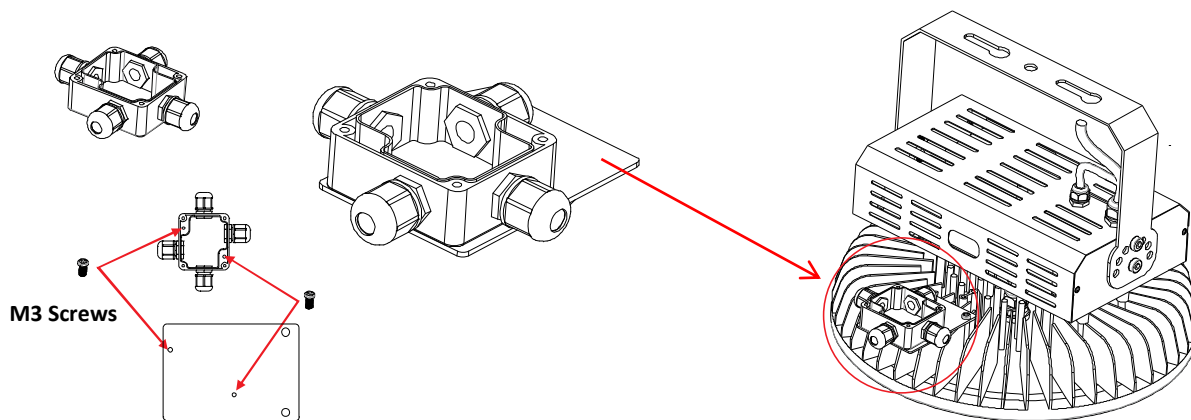
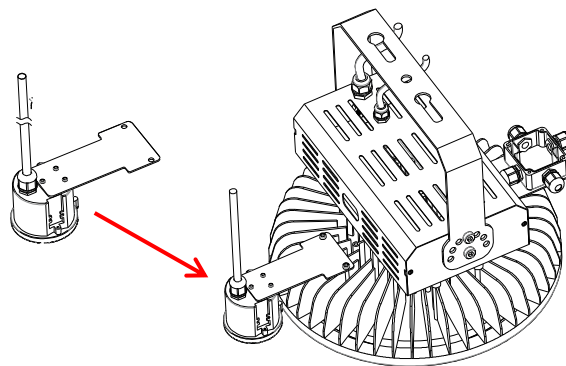


Figure 1: Attach terminal block to fixture

STEP 3: Attach sensor to fixture or reflector.

For Fixtures without Reflector:

- A) Attach sensor to mounting plate B (M3 screws).
- B) Attach mounting plate B to fixture (M4 screws).



**Figure 2: Attach sensor to fixture
(fixture without reflector)**

For Fixtures with Reflector:

- A) Unscrew thumbscrew enough to clear reflector lip.
- B) Firmly pry open lever spring and place sensor on reflector. Slowly release spring against inside of reflector to secure sensor.
- C) Tighten thumbscrew to further secure sensor to reflector lip.

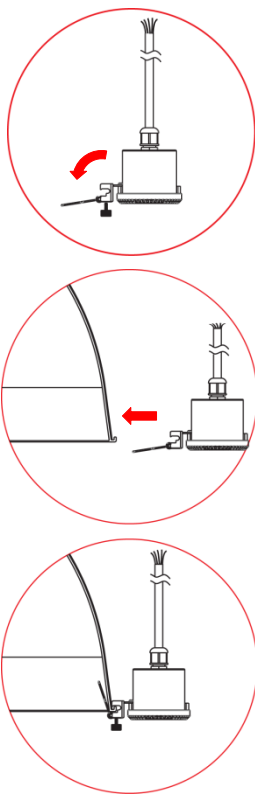


Figure 3: Attach sensor to reflector

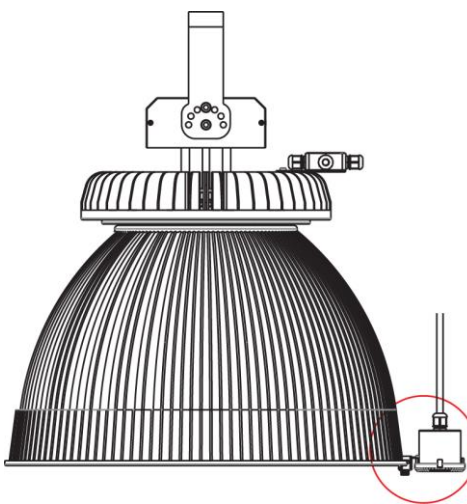


Figure 4: Tighten thumbscrew

STEP 4: Route wires into terminal block through cord reliefs. Complete wiring inside terminal block as shown in diagram below using provided wiring caps.

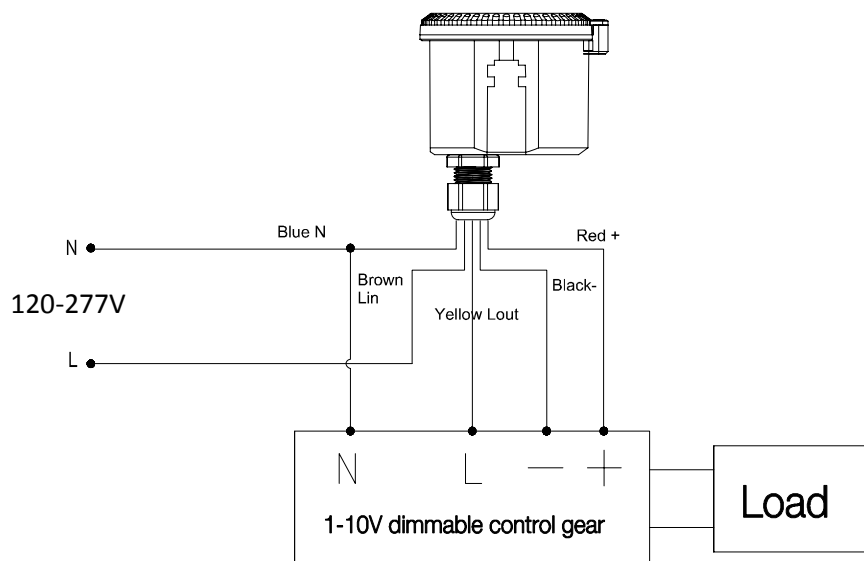


Figure 5: Wiring Diagram

STEP 5: Attach terminal block cover. Program sensor according to instructions included with sensor.

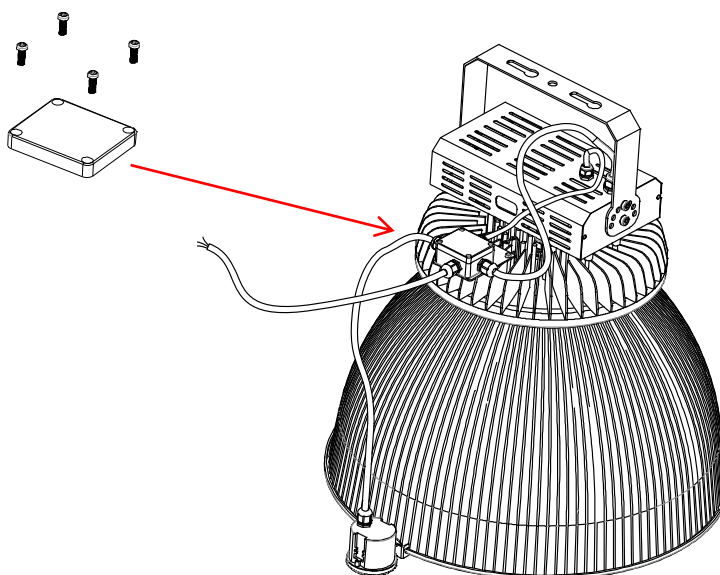


Figure 6: Attach cover to terminal block
(fixture shown with reflector)

(877) 281-1233

Fax: (877) 294-2829

2451 Enterprise Parkway East
Twinsburg, Ohio 44087 USA

E-mail: venture@adlt.com

VentureLighting.com





Avant de commencer


Lisez ces instructions complètement et attentivement



VENTURE
LIGHTING

Instructions d'installation du détecteur de mouvement

(VSolution Fixture avec ou sans réflecteur)

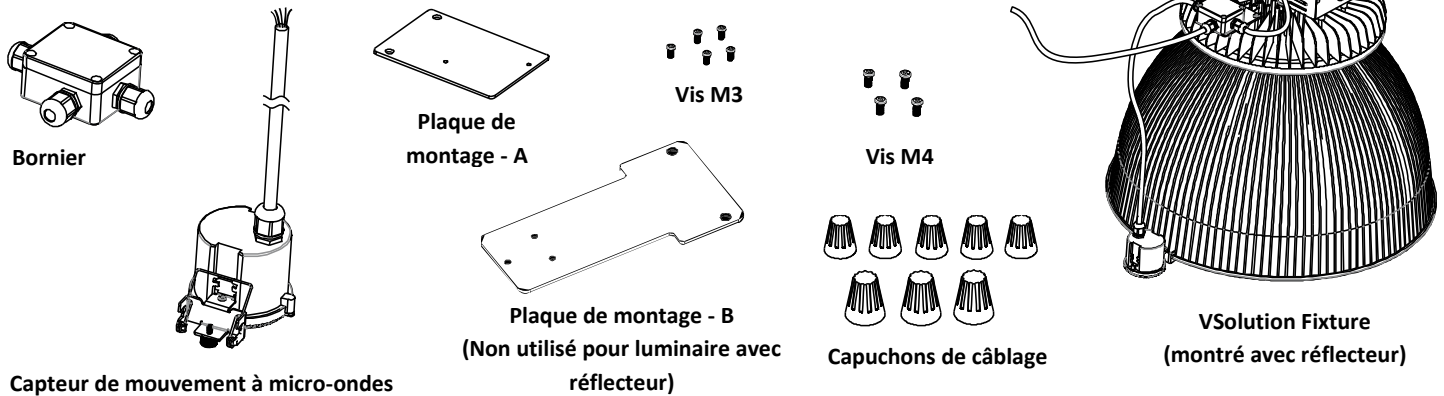

ÉTAPE 1: Retirer le couvercle du bornier et fixer la base du bloc à la plaque de montage A à l'aide de deux vis M3.

ÉTAPE 2: Fixez l'ensemble plaque de montage / bloc de jonction à l'appareil avec deux vis M4.

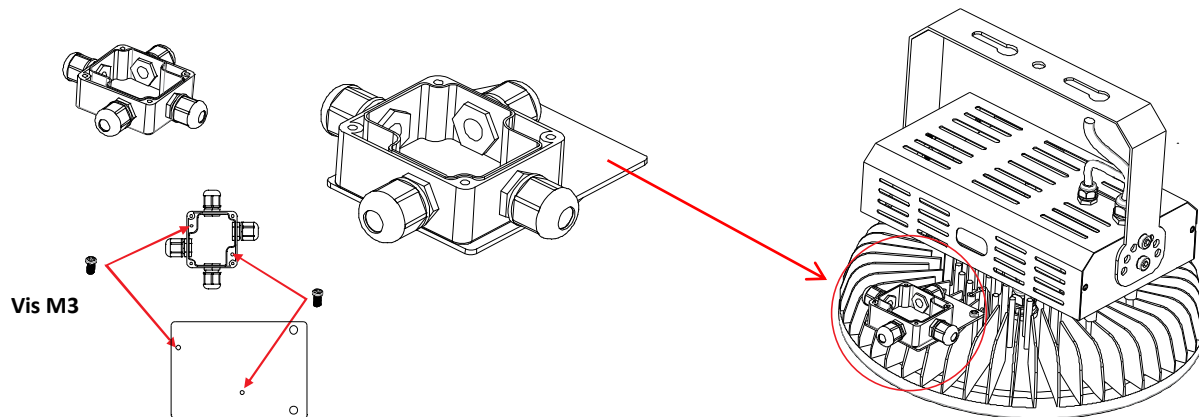


Figure 1: Fixez le bornier à l'appareil

ÉTAPE 3: Fixez le capteur à l'appareil ou au réflecteur.

Pour les luminaires sans réflecteur:

- A) Fixez le capteur à la plaque de montage B (vis M3).
- B) Fixez la plaque de montage B à la fixation (vis M4).

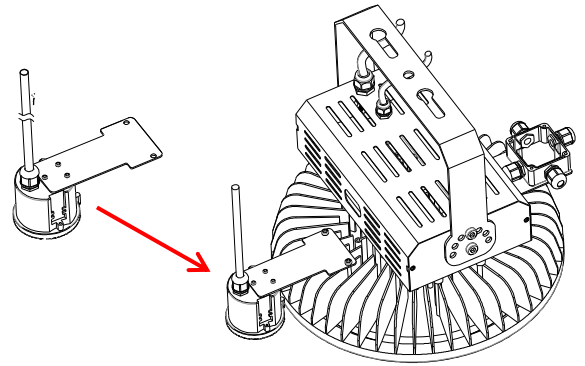


Figure 2: Attacher le capteur à l'appareil
(luminaire sans réflecteur)

Pour les luminaires avec réflecteur:

- A) Dévissez suffisamment la vis pour dégager la lèvre du réflecteur.
- B) Resserrer fermement le ressort du levier et placer le capteur sur le réflecteur. Relâcher lentement le ressort contre l'intérieur du réflecteur pour fixer le capteur.
- C) Serrez la vis pour fixer le capteur à la lèvre du réflecteur.

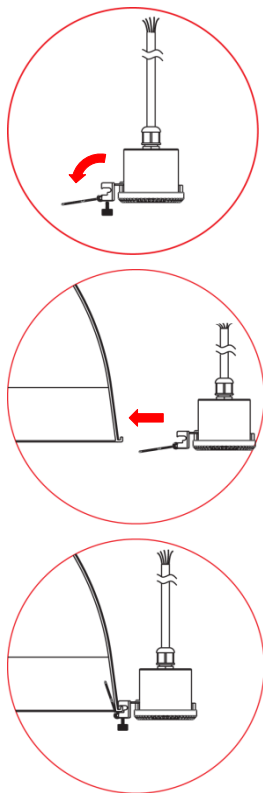


Figure 3: Attacher le capteur au réflecteur

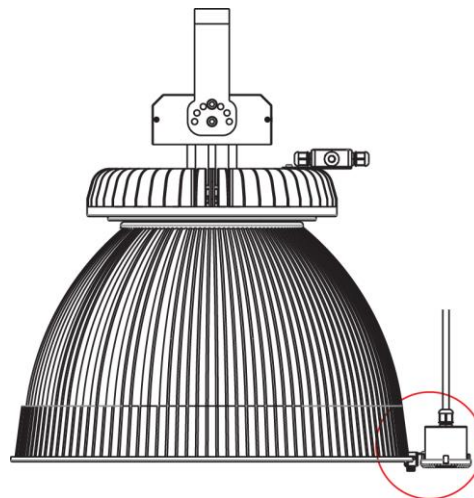


Figure 4: Serrez la vis à oreilles

ÉTAPE 4: Acheminer les fils dans le bornier à travers les reliefs du cordon. Terminer le câblage à l'intérieur du bornier comme indiqué sur le schéma ci-dessous en utilisant les bouchons de câblage fournis.

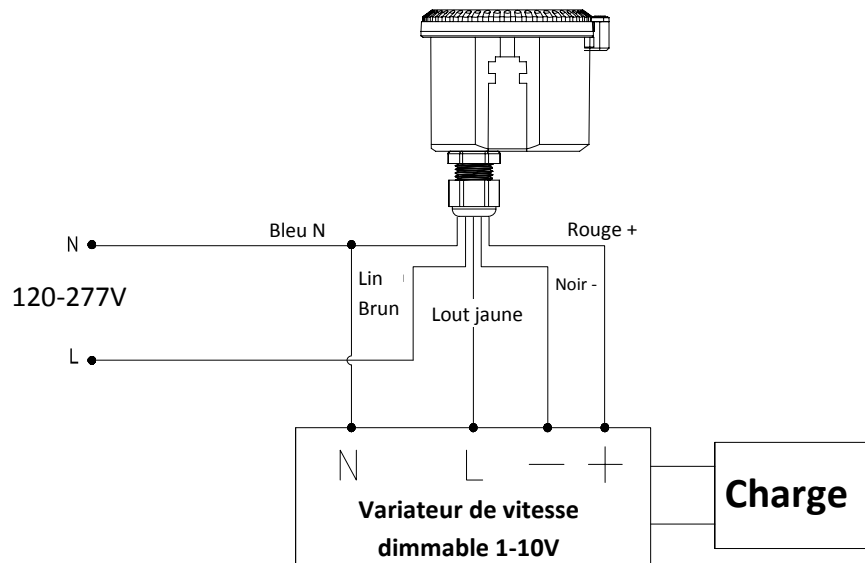


Figure 5: Schéma de câblage

ÉTAPE 5: Fixez le couvercle du bornier. Programmez le capteur selon les instructions fournies avec le capteur.

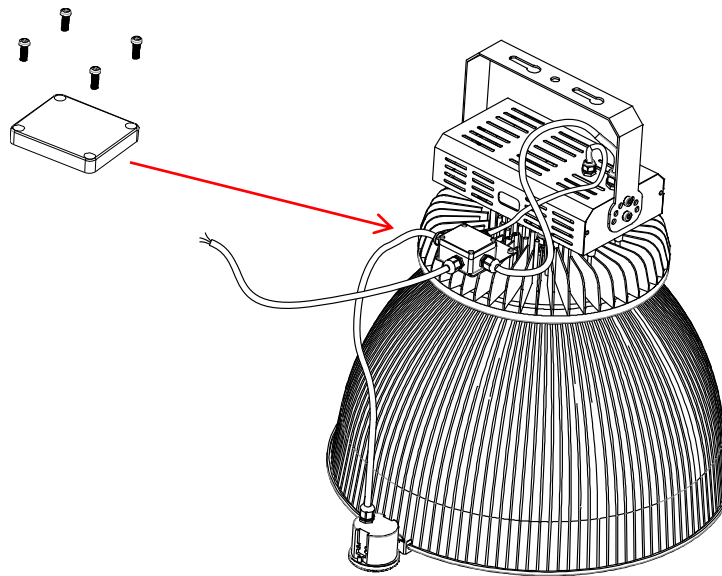


Figure 6: Fixez le couvercle au bornier
(luminaire illustré avec réflecteur)

(877) 281-1233

Fax: (877) 294-2829

2451 Enterprise Parkway East
Twinsburg, Ohio 44087 USA

E-mail: venture@adlt.com

VentureLighting.com

